ID20 - Series: A



Hydraulics: Pressure test equipment (valves, tooling and control

panels), hydraulic tools (instrumentation packages for gauges, control of service equipment, hydraulic jacks,

hydraulic tools)

Oil and Gas: Grease injection, control of subsea hydraulic

components, nitrogen service, Gaseous media handling

Technical Information


Inner Core: Polyamide (PA)

Pressure Support: 2 open layers, 2 dense layers of high-tensile steel wire

Outer Cover: Polyurethane (TPU)

Color: Black

Temperature: $-30^{\circ}\text{C to } +60^{\circ}\text{C } [-22^{\circ}\text{F to } 140^{\circ}\text{F}]$

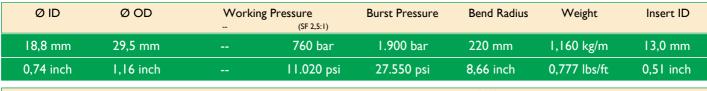

Part no.	Thread	Material	Dime A	ensions (B	mm)	암	Sleeve
Sleeve							
12020191W	-	Steel	36,3	62,4	-	-	
							<

	Dimensions (mm)				Insert				
Part no.	Thread	Material	Nut	Α	ı	В	С	암	iliser
Male fitting									
32020421A	I"xII I/2NPT	Steel	-	13	I	П	25	36	F 28
32020425A	I"xII I/2NPT	AISI 316Ti	-	13	I	П	25	36	4
Female swivel with O-Ring									
22020201A	M36x2	Steel	52040211, 52040201	13	I	15	-	46	22


Type M fema	Type M female swivel									
22020645A	I 5/16"x12UN	AISI 316Ti	52040645	13	89	-	46			



202W222

SPIR STAR®

ID20 - Series: A

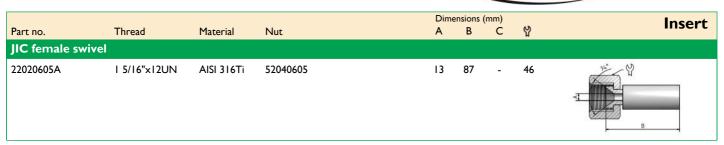

Part no.	Thread	Material	Relief bores	Dim A	ensions B	(mm) C	암	Swivel nut
Swivel nut								
52040605	I 5/16"×12UN	AISI 316Ti	l radial	25,5	34,5	14,5	46	
52040645	I 5/16"×12UN	AISI 316Ti	l radial	25,5	31,5	11,5	46	
52040211	M36x2	Steel	l radial	25,5	30	18	46	В

Part no.	Mesh length (mm)	Overall length (mm)	Breaking strength (kN)	Suitable for SPIR STAR® hose outer diameter (mm)	Hose securing grip
Hose secu	ıring grip shoı	rt version			
9204400	600,00	820,00	35,10	30-40	

Production related variations of the burst pressure of up to 5 % are possible. Other colors upon request.

The safety factors between the burst pressure and the working pressure as well as the test pressure depend on the operating conditions. For gaseous media the outer cover is to be pinpricked. Regarding the safety factor for gaseous media please contact your local SPIR STAR® assembling center.

The indicated working pressure refers to the hose only. Depending on the used fitting the permitted working pressure of a hose assembly may be less.

We reserve our rights for technical changes without notice. Subject to printing errors.

^{*)} Blast-Pro® fittings may only be used for tube cleaning operations inside the tube. They have not been designed for the use outside of tubes.